Prestige®

Frost Free
Fridge Freezer
USER'S MANUAL

PRT55FFSL
PRT55FFSS
PRT55FFW
PRT55FFBK

PLEASE READ THE USER'S OPERATION MANUAL CAREFULLY BEFORE USING

INDEX

Structure Illustration 01
Safety information 02
Installation 02
Important Safety Information.....03
Electrical Connection (UK ONLY) 04
Instructions for use 05
Temperature Control 05
The Internal Light 05
Storage of fresh food in the refrigerator 06
Store frozen food 06
Freezing fresh food (Freezer) 06
Making ice cubes 06
Refrigerator defrost process 07
Freezer defrost process 07
Cleaning and maintenance 07
Changing the light bulb 07
Power Failure 07
Reversing the doors 08
If the appliance is not operating correctly 10
Prolonged off periods 10
Before calling for service 10
Do's and don'ts 11
Technical data 12

STRUCTURE ILLUSTRATION

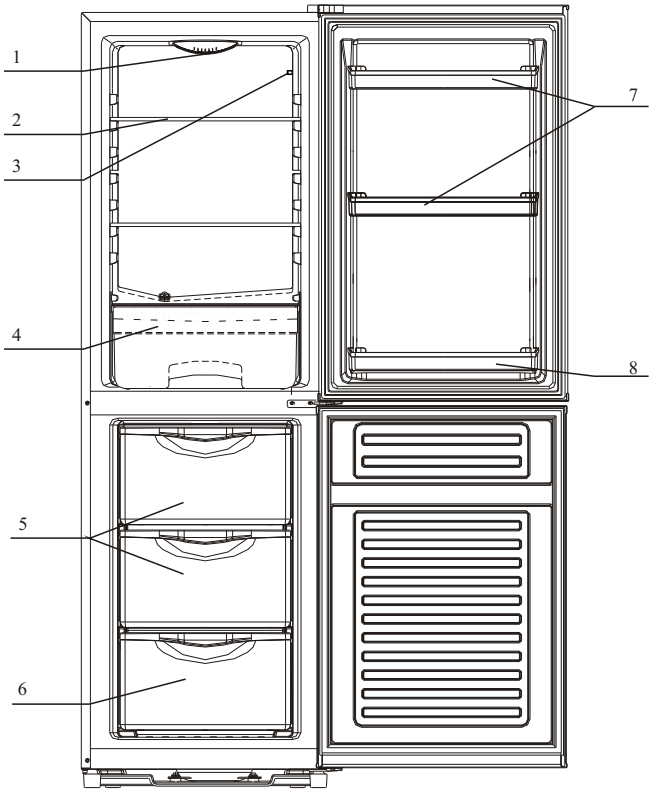

1.Temperature control knob
2.Refrigerator shelf
3.Lamp switch
4.Crisper Drawer
5.Drawer C/ D
6.Drawer B
7.Door rack
8.Bottle rack

Note : Compartment design may change due to product improvement, No prior notice will be given.

This booklet contains the information you will require to install and operate your new appliance.
It is important and worthwhile spending time to fully read this booklet so you will understand how to operate the appliance safely and efficiently.
Please keep this booklet in a safe place so that you can refer to it when required.

Safety information

This information is provided in the interest of your safety. Please read the following carefully before carrying out the installation or use of the appliance.
If you are discarding an old freezer or refrigerator with a lock / catch fitted to the door, ensure that it is left in a disabled condition to prevent the entrapment of children whilst playing.
As old refrigeration equipment may contain CFC's which will damage the ozone layer, when disposing of any refrigeration equipment please contact your local waste disposal facility for advice on the correct method of disposal.
This appliance must only be used for its intended purpose i.e. the freezing and storage of domestic edible foodstuffs and should not be used for any other purpose
If the mains cable requires replacement, this must only be undertaken by a suitably qualified person, as special purpose tools are required.

WARNING:
This appliance is intended for domestic use only, any other use may invalidate the warranty and might be dangerous.

Installation

Position the appliance and allow to stand for two to three hours before it is turned on for the first time to allow the system to settle. Do not position next to any heat source e.g. cooker, boiler or in direct sunlight etc.

A clearance of 10 cm must be left between the sides of the appliance and any adjacent cabinets or walls to allow for adequate air circulation. The appliance is not designed for recessed installation (building in).

Install on a good firm level surface, and any unevenness of the floor should be corrected prior to installation, slight unevenness can be overcome by adjusting the front feet.

NOTE: If the appliance is positioned on a carpet, soft floor covering you should re-adjust the front feet once the appliance has had time to settle.

IMPORTANT SAFETY INFORMATION

Please ensure that the voltage marked on the rating label matches the supply voltage in your location. The rating label is located on the rear of this product. Failure to use the correct voltage will render the guarantee VOID and may damage the appliance.

This appliance is intended for domestic use only; any other use may invalidate the warranty and might be dangerous.

This appliance is intended for indoor use only, do not use outdoors.
Accessible surfaces may become hot during normal operation, caution is advised.

To protect against possible electric shock do not immerse cord or plug in water or any other liquid.

Do not remove the mains plug by pulling on the supply cord; grasp the plug to remove it from the mains supply wall outlet.

Unplug from the mains outlet when not in use and before cleaning or maintenance.
Remove all food before cleaning this refrigerator.

If the supply cord becomes damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

Do not operate the appliance with a damaged cord or plug or in the advent that the appliance malfunctions or is damaged in any way. Contact the retail store where you purchased the freezer for advice.

Do not place the appliance near hot surfaces, or in direct sunlight.
Extreme caution must be used when moving or transporting this appliance as the appliance is heavy.

This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play on this refrigerator or swing on the door, there have been cases of children getting trapped inside the refrigeration products.

The mains plug is the main disconnection device for this refrigeration product and should remain accessible at all times.

The refrigerant in this refrigerator is isobutane(R600a) which is safe to the environment but is inflammable and should be handled by experienced engineers.

Do not damage the refrigerant circuit, if a leak is identified, ventilate the room and do not use a naked light.

Transport the refrigerator in an upright position, leave to stand for approx 4 hours before plugging in your refrigerator to allow the refrigerant have time to settle.

ELECTRICAL CONNECTION (UK ONLY)
For your safety please read the following information.

Warning: This appliance must be earthed.

The appliance must be connected to a 220 - 240 volts 50 cycle AC supply by means of a three pin socket, suitably earthed and should be protected by a 13 amp fuse in the plug. The appliance is supplied with a standard 13 amp 3-pin plug fitted with a 13-amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at 13 amp and approved to BS1362.
If the mains plug is unsuitable for the socket outlet in your home or is removed for any other reason, then the cut off plug should be disposed of safely, do not insert the cut off plug into a mains outlet to prevent the hazard of electric shock. Remove the fuse before disposal.
There is a danger of electric shock if the cut off plug is inserted into any 13-amp socket outlet.

How to wire a 13 amp plug:

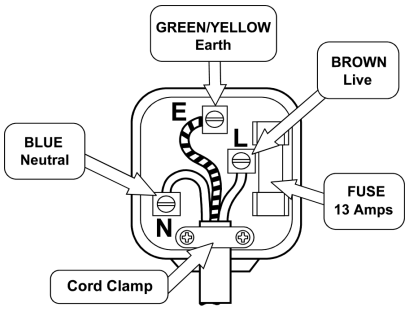

Important
The wires in the mains lead on this appliance are colored in accordance with the following code:
Green and Yellow - Earth
Blue – Neutral
Brown – Live

As the colours may not correspond with the markings identifying the terminals in your plug proceed as follows.
The green and yellow wire must be connected to the terminal in the plug which is marked with the letter E or with the earth symbol ⏚ or colored green and yellow.
The blue wire must be connected to the terminal marked N.
The brown wire must be connected to the terminal marked L.
You must make sure the mains cord is firmly secured under the cord clamp.

Warnings:
Keep ventilation openings, in the appliance enclosure or in the built in structure, clear of obstructions.
Do not use mechanical devices or other means to accelerate the defrost process, other than those recommended by the manufacturer.
Do not damage the refrigerant circuit.
Do not use electrical devices inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Instructions for use

Remove all packing materials and wash the interior of the appliance using lukewarm water containing a little bicarbonate of soda in the proportion of 1 teaspoon to 1.2 liters (2 pints) of water. Do not use detergents or soaps as they may taint the food. After cleaning, dry all parts thoroughly.

Temperature Control

The refrigerator is designed to maintain an internal storage temperature in the refrigerator compartment between 0 ℃ to +8 ℃ .

To enable adjustment of the temperature in the appliance it is fitted with an adjustable thermostat located in the fridge compartment, which can be adjusted from setting 1 (warmest) to 7 (coldest). For normal working temperature it is recommended to adjust the thermostat control to the midway position, after a few hours readjust the thermostat to the desired temperature. There is also an off position 0 . Which turns OFF the refrigerator and freezer compartments. Please Note this dose not disconnect the appliance from the mains supply. To do this you must remove the mains plug from the socket.

To obtain a lower internal temperature turn the thermostat temperature control to a higher number. To obtain a higher internal temperature turn the thermostat control to a lower number. However, the internal temperature and temperature control setting is dependent on a number of factors:

1. Varying ambient temperatures.
2. The number of times the appliance doors are opened and how long the doors remain open.
3. The amount and temperature of the food and drink introduced into the appliance.
4. The weather conditions and time of year e.g. summer / winter.
5. The positioning of the appliance and an adequate air circulation to the sides and back of the cabinet.

Never place hot or warm foods into the cabinet or leave the doors open for longer than necessary as this will raise the temperature and cause excessive amounts of moisture thus increasing the amount of ice in the refrigerator / freezer compartment.

The Internal Light

The internal light will automatically switch ON and OFF whenever the refrigerator door is opened or closed. To change the light bulb, please see the chapter on changing the light bulb.

Storage of fresh food in the refrigerator

Food should always be covered tightly with foil, plastic film, placed in bags or stored in airtight containers. This will prevent food from dehydrating and prevent the strong smell of some foods transferring to milder ones.

To store raw meat wrap in polythene bags or airtight containers and place on the lowest shelf.

Do not allow raw meat to come into contact with cooked foods. For safety, only store raw meat for two or three days. Fruit and vegetables should be thoroughly cleaned and placed in the vegetable/ salad bin.

Milk and other liquids should be sealed with lids and placed in the bottle shelf on the door.

Store frozen food

When using the freezer for the first time or after defrosting, turn the thermostat temperature control to setting 7 for at least two hours before introducing the food to be stored, Then adjust to your preferred setting.

All frozen food products you purchase should be placed in the freezer as soon as possible to avoid the frozen food from defrosting.

Storage recommendations printed on the packaging of frozen food by the manufactures should always be followed.

Freezing fresh food (Freezer)

Ensure that your freezing operations are carried out under the most hygienic conditions, as freezing alone does not sterilise the food. Never put hot or even warm foodstuffs into the freezer. Prior to storing the food, pack it in plastic bags, aluminium foil or freezer containers and place into the freezer without putting them in contact with food that has already been frozen. See the technical data sheet at the rear of this booklet for the maximum permissible amount in kilograms of fresh food that can be frozen in any 24 hour period with a room temperature of 25C Never freeze more than the maximum permissible amount of food as shown in the technical data at the end of this instruction book.

Making ice cubes

Pour water into the ice cube tray until it is two thirds full and place into the freezer. Ice cubes will form in approximately 2 to 3 hours. The ice cube can be easily removed by twisting the ice cube tray or running under cold water for a short time.

Refrigerator defrost process

The refrigerator defrosting process is carried out automatically every time the compressor stops.

The defrost water drains from the cabinet into a tray placed on the top of the compressor to the rear of the unit where it evaporates.

Freezer defrost process

This Freezer is frost-free and does not need defrosting.

Warning: The refrigerating system must not be damaged at any time.

Cleaning and maintenance

Before any cleaning or maintenance is carried out you must disconnect the appliance from the mains supply by removing the plug, never remove the plug by pulling on the mains cord. Remove the plug by pulling on the plug itself.

It is recommended that when cleaning the appliance, both the inside and outside, can be cleaned using warm water and a little bicarbonate of soda. Use 1 teaspoon to 1.2 litres of water.

If the appliance is not to be used for a long period of time then it is recommended to remove all the food stuff, clean the inside of the appliance and leave the door open to allow the air to circulate thus avoiding unpleasant odors.

Changing the light bulb

Note. Light bulbs are not covered by the warranty

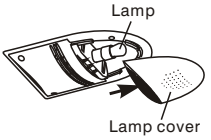

Disconnect the appliance from the mains supply.

Pull the lamp cover forwards, to gain accesses to the lamp holder. Unscrew the light bulb in an anti clockwise direction from the holder.

Replace the bulb with one of the correct type and size (10 watt SES E14 base).

Replace the cover by Pushing the cover Backwards along the grooves.

Reconnect the appliance to the mains supply.

Power Failure

If there is a power failure for a short time less than 11 hrs keep the door closed

Frozen food should not be affected if the failure lasts for more than 11 hrs.

Extra protection can be given by covering the appliance with two or three thick blankets.

If a long power failure is anticipated, try to get the foodstuff into another appliance or cold store, if possible.

If the power cut is longer than 11 hrs then check the content of the freezer.

If the food has defrosted, cook and refreeze the food or it should be eaten immediately.

Never refreeze food that as been defrosted.

Reversing the doors

The doors are able to be reversed on this model.

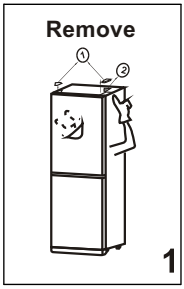

- Remove the hinge cover (1) and the top hinge (2).

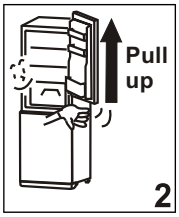

- Lift the refrigerator door upwards to disengage it from the middle hinge. Put the door to one side, laying it down gently on a padded surface.

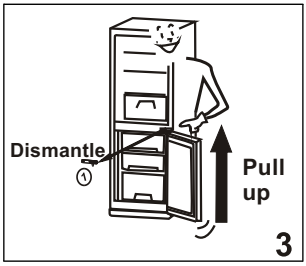

- Using a screwdriver, dismantle the middle hinge.
- Lift the freezer door upwards to disengage it from the lower hinge. Put the door to one side, laying it down gently on a padded surface.

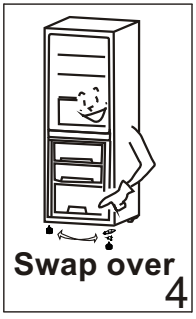

- Swap over the position of the lower hinge and the adjustable leg to the other side of the cabinet.

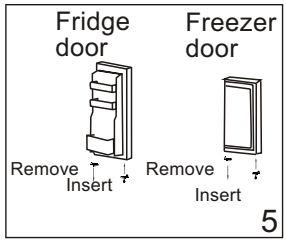

- Remove the hinge pin that is in the bottom of the fridge and freezer door.
- On the other side of the fridge and freezer door, insert the replacement hinge pin that is supplied with the appliance.

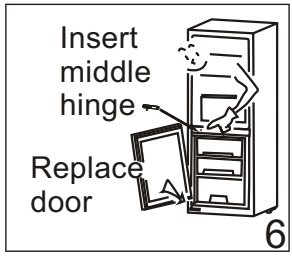

- Place the freezer door on the lower hinge, making sure that the hinge pin is inserted in the hole in the bottom of the freezer door.
- Put the middle hinge back on the cabinet, making sure that it is on the opposite side from its original position.

- Place the fridge door on the middle hinge, making sure that the hinge pin is inserted in the hole in the bottom of the fridge door.
- Shut the door and then replace the top hinge. Ensure that the top hinge pin is inserted in the hole at the top of the fridge door.
- Replace the hinge covers.

Important: please ensure the doors are aligned horizontally and vertically and the seals are closed on all sides before finally tightening the hinges. If necessary, re-adjust the leveling feet.

If the appliance is not operating correctly:

Please check the following points.

Is there a power failure? (Check by turning on a house light)

Has the fuse blown or has the circuit breaker tripped.

Has the door been closed correctly?

Check the thermostat has been set correctly.

Check the mains plug is seated in the wall socket correctly and the socket switch is on.

Check the power outlet is working, Try another appliance.

Is the room temperature too cold or too hot. (working temperature range 16℃ to 32℃)

Prolonged off periods

If the refrigerator is not in use for a long period of time, proceed as follows:

Disconnect the refrigerator from the main supply by removing the plug from the socket.

Clean and dry the inside as instructed under the heading of cleaning the appliance.

Leave the do or open to prevent any unpleasant smells from building up while the appliance is not in use.

If there is a power failure for a short time keep the door closed check the contents of the refrigerator every so often.

Before calling for service

Please check the following points:

1. The refrigerator is not working

Check the plug is inserted correctly into the wall socket

Check there is power to the wall socket by plugging in another appliance, if the other appliance works, check the fuse in the appliance plug.

2. The refrigerator is noisy when running

Check the appliance is level and is not in contact with another appliance or kitchen furniture.

3. The refrigerator does not cool sufficiently.

If the door has been opened too often, or it has been left open for a while it will take time for the appliance to reach its set temperature.

Check the air flow around the refrigerator has not been reduced due to insufficient clearance.

NOTE: The following characteristics should not be looked upon as a problem.

A gentle tricking sound caused by coolant flowing through the pipe.

Compressor operating at high temperature.

Do's and don'ts

Do- keep raw meat and poultry below cooked food and dairy products.
Do- Leave lettuce, cabbage, parsley and cauliflower on the stem.
Do- Wrap cheese firstly in greaseproof paper and then in a polythene bag, excluding As much air as possible. For best results, take out of the fridge compartment an hour before eating.
Do- Wrap raw meat and poultry loosely in polythene or aluminium foil. This prevents drying.
Do- Wrap fish and offal in polythene bags.
Do- Wrap food with a strong odour or which may dry out, in polythene bags, or aluminium foil or place in airtight container.
Do- Wrap bread well to keep it fresh.
Do- Chill white wines, beer, larger and mineral water before serving.
Do- Check contents of the low temp compartment every so often.
Do- Keep food for as short a time as possible and adhere to est before and Use by etc. dates.
Do- Store commercially prepared food in accordance with the instructions given on the packets.
Do- Always choose high quality fresh food and be sure it is thoroughly clean before Storing it.
Do- Wrap all food in aluminium foil or food quality polythene bags and make sure any air is excluded.
Do-Keep ventilation openings, in the appliance enclosure clear of obstruction.
Do-ensure that frozen food does not rise in temperature while defrosting, a rise in temperature during defrosting may shorten the storage life of your food.

Don't- Cover the shelves with any protective materials which may obstruct air circulation.
Don't- Store poisonous or any dangerous substances in your fridge. It has been designed for the storage of edible foodstuffs only.
Don't- Consume food which has been refrigerated for an excessive length of time.
Don't- Store cooked and fresh food together in the same container. They should be packaged and stored separately.
Don't- Let defrosting food or food juices drip onto already stored food.
Don't- leave the door open for long periods, as this will make the appliance more costly to run and cause excessive ice formation.
Don't- Use sharp edged objects such as knives or forks to remove the ice.
Don't- Never use hairdryers, or electrical appliances for defrosting only use item recommended by the manufacturer.
Don't- put hot food into the appliance. Let it cool down first.
Don't- put liquid-filled bottles or sealed cans containing carbonated liquids into the freezer section, as they may burst.
Don't- Give children ice cream and water ices direct from the freezer section. The low temperature may cause 'freezer burns' on the lips.
Don't- Try to keep frozen food which has thawed; it should be eaten within 24 hours or cooked and refrozen.
Don't- Damage the refrigerant circuit at any time

Technical data

Brand	Prestige
Appliance type	**Fridge freezer**
Star rating	****
Frequency (Hz)	50 Hz
Light Power (Watts)	10W
Net Freezer volume	90L
Net Refrigerator Volume	122L
Freezing capacity (kg/24h)	3.0kg/24h
Rated Voltage (V)	220-240V~
Climate Class +Ambient Range	N
Gross Weight(Kg)	67Kg
Energy consumption (kWh/24h)	0.79kWh/24h
Energy Consumption (kWh/year)	288kWh/year
Input Power (Watts)	88W
DEFROST POWER	145W
Refrigerating agent	R600a/53g
Outside dimensions (W x D x H)	551×629×1610
Refrigerating Blowing Gas	**CycloPentane**

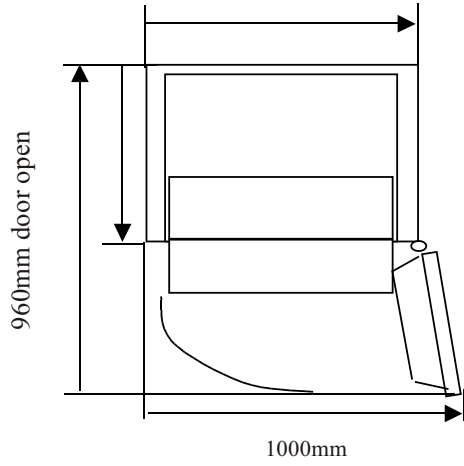

IMPORTANT DISPOSAL INSTRUCTIONS

As a responsible retailer we care about the environment.
As such we urge you to follow the correct disposal procedure for your product and packaging materials. This will help conserve natural recourses and ensure that it is recycled in a manner that protects health and the environment.

You must dispose of this product and its packaging according to local laws and regulations.

Because this product contains electronic components, the product and its accessories must be disposed of separately from household waste when the product reaches its end of life.

Contact your local authority to learn about disposal and recycling.

The product should be taken to your local collection point for recycling. Some collection points accept products free of charge.

If something doesn't seem to work
If there is something about your appliance which you do not understand and you live in the UK, you can phone our help line during normal office hours on: 0844 8009595
Calls are charged at standard rates.

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

Prestige@ is a registered trademark of Meyer Intellectual Properties Limited and is sold pursuant to a license.

Kesa Electricals UK, HU1 3AU 02 / 09/ 2009